


Quick Start

K32LCD+ Keypad

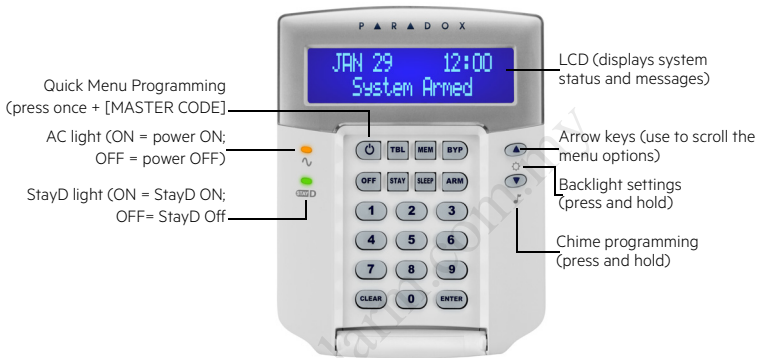

How To Arm

Arming When Exiting (Regular Arm)

To arm your system when exiting:

| Step | Description |
|------|---|
| 1. | Close all zones in the desired partition. |
| 2. | Press [ARM] and enter your [ACCESS CODE]. |

Note: To arm with StayD enabled, refer to the StayD user manual, available at paradox.com. To learn more about StayD, contact your installer.

Arming When Staying (Stay/Sleep Arm)

To arm your system when staying:

| Step | Description |
|------|---|
| 1. | Press [STAY] for stay arming or [SLEEP] for sleep arming and then enter your [ACCESS CODE]. |
| 2. | Select the desired partition (1 or 2). For both, press one, then the other after the beep. |

How to Disarm

To disarm your system when entering:

| Step | Description |
|------|--|
| 1. | Press [OFF] and enter your [ACCESS CODE]. |
| 2. | Select the desired partition (1 or 2). For both, press one, then the other after the beep. |

Panic Keys

To send a silent or audible alarm to your security company, press and hold one of the key combinations listed below, for two seconds.

| Panic Alarm | Key Combinations |
|-------------|------------------|
| Police | Keys [1] & [3] |
| Medical | Keys [4] & [6] |
| Fire | Keys [7] & [9] |

Alarm Memory Display

To view the alarms that occurred during the last armed period:

| Step | Description |
|------|---|
| 1. | Disarm the system. |
| 2. | Press [MEM]. All zones that were breached during the last armed period will be displayed. Use the arrow keys to view the zones. |
| 3. | Press [ENTER] to save and exit. |

Trouble Display

The LCD screen will display all troubles when they occur. To view and clear troubles:

| Step | Description |
|------|---|
| 1. | Press [TBL]. |
| 2. | Scroll through the list of troubles using the arrow keys. Refer to the MGSP User Guide for trouble descriptions and instructions. |
| 3. | Perform the recommended repair instructions to clear the trouble. If no instructions are given, contact your security company. |
| 4. | Press [CLEAR] to exit. |

How to Bypass Zones

When a zone is bypassed, it remains unarmed when the corresponding area is armed. To bypass zones:

| Step | Description |
|------|---|
| 1. | Press [BYP]. |
| 2. | Enter your [ACCESS CODE]. |
| 3. | Select the zone you want to bypass by entering the zone number, e.g. zone 3=03. |
| 4. | Press [Enter]. |