

SUPA8 User Manual – Simplified Version

Function Keys

Enter a Valid User Code, follow by the any button to activate respective function

[1] **PANIC** activate panic; audible/Silent Siren

[2] **DURESS** activate Silent Reporting to pre-programmed phone numbers

[3] **TEST** Dialer Test by reporting to pre-programmed phone numbers.

[4] **REVIEW**

The ON-LINE, LOW BATT, AC FAIL & ON lights will all be on. Review mode displays a history of past

alarms and events stored in the SUPA8 memory. This alarm memory is permanently stored and can be cleared by pressing [0] while in review mode. (Please note that your Entry Delay Zone/s will always be stored in memory, even if they have not alarmed.) While in review mode, various events will be displayed by pressing the following keys:

[1] **Previous Zone Alarms**

Lights 1 - 8 Previous alarm on Zones 1 - 8 since the SUPA8 is last reset.

Note: The first Zone that was triggered will be flashing.

[2] **Previous Non-Zone Alarms**

Light Meaning

1 Duress input triggered.

2 Panic input triggered.

3 Test input triggered.

4 Low Battery input triggered.

5 AC Fail input triggered.

6 On input triggered.

7 Fail-to-communicate input triggered.

8 Spare input triggered.

[3] **Previous Events (Miscellaneous)**

Light Meaning

1 Siren has been turned on.

2 Strobe has been turned on.

3 Dialler has been triggered.

4 Dialler failed (reached max. attempts).

5 (Not used)

6 Maximum code attempts activated.

7 Low battery has turned off siren (and strobe).

8 Answered phone.

[5] WALK TEST

Selecting this operation whilst the SUPA8 is OFF will initiate walk-test mode. Walk-test can only be performed by holders of user codes 1 to 7. Walk-test mode allows all Zones, the siren and the strobe to be tested. Operation is as follows:

When walk-test mode is first entered, all 8 Zone lights will be off. The AC Fail light will show whether AC is present or not and the Low Batt light will show whether the battery charging voltage is adequate.

As Zones are triggered the siren will squawk and the relevant Zone light will turn on and remain turned on. This allows a "one man" walk-test by walking through all Zones.

Pressing the [0] key turns off all Zone lights and allows the test to be repeated, if required.

While in test mode:

- [1] turn on the siren.
- [2] turn on the strobe.
- [3] turn off the siren and strobe.
- [*] exit walk-test.

[6] ISOLATE

Isolating Zones

You are able to isolate (disable) selected Zones and turn the system ON. This is useful in cases where, for example, a pet will be kept in a certain room or if a detector has become faulty and must be isolated from the system.

1. Enter [*] To clear the keypad
2. Enter [User Code] (All Zone lights will flash - waiting for a command)
3. Enter [6] The ON-LINE, LOW BAT, AC FAIL & ON lights will turn on to indicate isolation mode
4. Enter the Zone number/s you wish to isolate. The corresponding lights will turn on. Pressing the Zone number again will turn off the isolation for that Zone.
5. Enter [*] to exit

The system can now be turned ON as normal. Isolated Zones are enabled again the next time you turn the SUPA8 OFF.

[7] PROGRAM

Programming User Codes

1. Enter [*][Master Code] (All Zone lights will flash - waiting for a command)
2. Enter [7] (ON-LINE lights flashing indicates program mode)
3. Enter the Address for the User Code;
 - Address [000] Master Code, DEFAULT CODE: 0000
 - Address [008] User Code 2
 - Address [012] User Code 3
 - Address [016] User Code 4
 - Address [020] User Code 5.....Address [060] User Code 15
4. The existing User Code, if any, will be displayed digit by digit. If the User Code you are programming is currently blank, lights 7 & 8 will be on.
5. Enter a 4-digit code Enter each digit slowly and wait for the keypad to beep after each digit is entered. The ON-LINE light will be flashing if all digits have been entered correctly. (If you make a mistake at this stage, press [*] to go back to step 3)
6. Enter [*] To exit program mode

Turning the system ON in AWAY mode (using your User Code)

In the AWAY mode, all Zones programmed as AWAY Zones will be armed.

The ON light should be off indicating the system is OFF. Make sure that all protected doors and windows are shut securely. Check also that all Zone lights on the Keypad are off, except for the Zones you use to exit the premises

1. Enter [*] To clear the keypad
2. Enter [User Code] (All Zone lights will flash - waiting for a command)
3. Enter [9] Arms the SUPA8 in Away mode
4. Check that the ON light turns on. (The exit beeper will sound continuously during exit delay. If the exit beeper has been turned off by the installer, three beeps will be heard at the end of exit delay.) You now have a limited time to leave the premises (which will have been preset by your installer) before an alarm is generated. If you need to re-enter the premises, turn the system OFF, then back ON again as you leave.

NOTE: If you make a mistake when you attempt to enter your User code, press the [*] key and try again.

Turning the system ON in AWAY mode (using Quick Away)

Your installer may have programmed the SUPA8 to allow abbreviated arming. If so, turn the system ON as follows.

1. Enter [*] To clear the keypad
2. Enter [#] (All Zone lights will flash - waiting for a command)
3. Enter [9] Arms the SUPA8 in Away mode

Turning the system ON in HOME mode (using your User Code)

The ON light should be off indicating the system is OFF.

Your installer may have installed your system so that some areas may be monitored whilst you are still on the premises. For example, the doors and windows may be protected at night leaving the internal detectors isolated to allow movement inside the house.

Make sure that all protected areas are shut securely.

1. Enter [*] To clear the keypad
2. Enter [User Code] (All Zone lights will flash - waiting for a command)
3. Enter [8] Arms the SUPA8 in Home mode
4. Check that the ON light starts flashing to indicate arming in Home mode.

Turning the system ON in HOME mode (using Quick Home)

Your installer may have programmed the SUPA8 to allow abbreviated arming. If so, turn the system ON as follows.

1. Enter [*] To clear the keypad
2. Enter [#] (All Zone lights will flash - waiting for a command)
3. Enter [8] Arms the SUPA8 in Away mode

Turning the system OFF

1. Enter [*] To clear the keypad
2. Enter [User Code] (All Zone lights will flash - waiting for a command)
3. Enter [0] Turns OFF the SUPA8

Operation by Telephone

Your SUPA8 alarm panel may have been set up to allow you to telephone the system to determine if it is ON or OFF. You can also turn the system ON or OFF remotely by telephone. The call can be made from any telephone capable of tone dialling, including DTMF-capable mobile telephones. To operate your system by a telephone call, follow the steps below:

1. Ring the number that your SUPA8 is connected to. In most cases that will be your home telephone number.
2. After 15 rings, or the programmed number of rings, the SUPA8 will answer the phone. If the SUPA8 is OFF only one beep will be heard. If the call is cut off before 15 rings (either because the telephone network will not allow 15 rings or an answering machine is connected and keeps intercepting the call), immediately hang up and call the system back. It remembers the number of rings for 45 seconds after a call attempt has been terminated. It will continue to count rings through repeated attempts until either 15 rings have occurred or more than 45 seconds has elapsed without a ring. (If you only want to check the ON/OFF status of the SUPA8, without making any change, simply hang up after you hear the beep or beeps.)
3. If you want to turn the SUPA8 ON, enter your 4 digit user code followed by [9] key on your telephone keypad. If you make a mistake then press [*] and try again.
4. If you want to turn the SUPA8 OFF, enter your 4 digit user code followed [0] key on your telephone keypad. If you make a mistake then press the [*] key and try again.
5. The [#] key may now be used to hang-up the SUPA8.