

TEXECOM Premier 816 Operation Guide

ARMING AND DISARMING THE ALARM SYSTEM

Checking if the System is ready to Arm

Check if Ready light is ON:

Ready ON = ready to Arm

Ready Flashing = Zone(s) bypassed, Forced-Zones violated.

Eg: Main Door open ?

Ready Off = Check for open Zone(s)

System Arming – To Turn ON

Enter Access Code, for example: <1><2><3><4><ARM>

The [Arm Light] will flash, and Exit Tone will sound

System DisArming – To Turn OFF

Enter Access Code, for example: <1><2><3><4>

The [Arm Light] will OFF.

If an alarm is activated, keypad will show the alarm Zone(s).

You must RESET the system, before you can arm again:

To **RESET**, press, for example:

<5><6><7><8><MENU><0>

System Bypass

Enter Access Code, for example: <1><2><3><4><BYPASS>

The READY flashes, enter 2-digit Zone Number, for example,

<0><2> to bypass Zone 2 or

<0><3><0><4> to bypass Zone 3 and Zone 4

System unBypass

All bypassed Zone(s) will be unBypass when system is DisArmed.

Checking Previous Alarm

Enter Access Code, for example:

<1><2><3><4><MENU><1>

Press <MENU> to return to normal mode.

Chime Zone(s)

Enter Access Code, for example:

<1><2><3><4><MENU><4> to toggle chime on/off.

Note: Zone 1 = Main Entrance, is programmed with Chime (ding-dong)

PROGRAMMING USER CODE

Adding More User Code

Enter Master Access Code, for example:

<1><2><3><4><MENU><9><8><0>

then enter 2-digit User Number, eg: <0><3>

then enter 4-digit new Code, eg: <2><3><4><5> then <ARM>

then Re-enter the new code, eg: <2><3><4><5>

Press <MENU> to return to normal mode.

In short, to add user 03 = 2345, you need to enter:

<1><2><3><4><MENU><9><8><0> <0><3>

<2><3><4><5> <ARM> <2><3><4><5>

then press <MENU> to return to normal mode.

Deleting User Code

Enter Master Access Code, for example:

<1><2><3><4><MENU><9><8><0> then

then enter 2-digit User Number, for example:

<0><3><BYPASS> to delete User 03

Press <MENU> to return to normal mode.

Changing User Code

Enter your User Code, for example:

<1><2><3><4><MENU><5> then

<new1><new2><new3><new4><ARM>

<new1><new2><new3><new4>

Press <MENU> to return to normal mode.

The keypad will sound an acceptance tone if the new access code was accepted, if you hear and Error Tone (Low Tone), the code is not changed.

SERVICE Light

Enter Access Code, for example:

<5><6><7><8><MENU><2>

The system will display all Service Fault.

Press <MENU> to return to normal mode.

| Service Faults Displayed on LED Keypads | |
|---|---|
| Light | Fault Condition |
| 1 | AC Fail |
| 2 | Telephone Line Fault |
| 3 | 2-Wire Smoke Alarm |
| 4 | Box Tamper & Auxiliary Input: Press (4) to view type, Lights 1 - 3 will light up: Light 1 = Box Tamper Light 2 = Auxiliary Tamper Light 3 = Auxiliary PA |
| 5 | Date or Time Lost |
| 6 | Zone Tamper/Trouble Press (6) to view zone number |
| 7 | Keypad Tamper/Removed Press (7) to view keypad number |
| 8 | Equipment Faults Press (8) to view fault type: Light 1 = Output 1 Fault Light 2 = Output 2 Fault Light 3 = Siren/Bell Fault Light 4 = 2-Wire Smoke Sensor Fault Light 5 = Auxiliary Fuse Failed Light 6 = Battery Fault Light 7 = Service Timer/Zone Soak Test Failed Light 8 = Communication Fault |

TEXECOM Premier 816 Operation Guide

简单用户手册

检查系统区位状况， 确保所有区位已定位

READY 灯亮着 = 可以ARM

READY 灯闪着 = 区位BYPASS， 又或者FORCED - ZONE (S)； 例如大门打开了

READY 灯没亮 = 查看区位号码亮灯， 确保所有门、窗都以关上

系统RESET

按用户密码MENU 0

系统ARM

按用户密码ARM

ARM 灯将会开始闪， 出门时限声音也会响。

出门后， 把门关上就可以了

系统DISARM

当您回来打开进门时， 进门时限声音会开始响。

按用户密码DISARM后， ARM 灯不会在亮。

ISOLATE区位

在特别情况下， 也许您需要ISOLATE一些区位

按用户密码BYPASS

READY灯在闪， 再按且位号码（2为数）

例如： ISOLATE 区位2, 3, 4

按用户密码BYPASS 02 03 04

按MENU以回到系统操作状态

检查之前ALARM

按用户密码MENU 1， 查看区位号码亮灯

按MENU以回到系统操作状态

CHIME (DING DONG)

按用户密码MENU 4 来启动， 关闭CHIME

注： 大多数进门独会有CHIME功能， 用户可以自由启动， 关闭 CHIME

用户密码

更改用户密码

按现有密码MENU 5

按新的密码ARM， 重按同样的新密码

增加用户密码

按MASTER用户密码MENU 9 8 0

再按2一位数用户号码

再按4一位数用户密码， 例如： 2345 然后按ARM

重按同样的用户密码

按15678 灯亮ARM ARM

按5灯亮ARM

按MENU以回到系统操作状态

删除用户密码

按MASTER用户密码MENU 9 8 0

再按2一位数用户号码

再按BYPASS

按MENU以回到系统操作状态

例如： 要删除用户03

按MASTER密码MENU980 03 BYPASS MENU

SERVICE灯

按用户密码MENU2， 查看区位号码亮灯

区位两灯代号如下：

1 — 电流故障

2 — 电话线故障

5 — 时间、日期消失

要设定， 按MASTER密码MENU995HHMM96DDMMYY

按MENU以回到系统操作状态

8 — 按8号， 查看区位号码亮灯， 代号如下：

3 — 扬声器故障

6 — 乾电池故障

8 — 通讯故障