

SUPA L5 L8 Alarm System User Manual

Quick Operation Reference

Away Arm	[User Code] [9] or [User Code] [AWAY]
Home Arm	[User Code] [8] or [User Code] [HOME]
Quick Away Arm	[#] [AWAY] or [#] [9]
Quick Home Arm	[#] [HOME] or [#] [8]
Disarm	[User Code] [0]
Bypass	[User Code] [6] [Zone Number] [*]
Quick Bypass	[#] [6] [Zone Number] [*]
Review	[User Code] [4]
Quick Review	[#] [4]
Walk-test	[User Code] [5]
Panic alarm	[#] [PANIC] or [#] [1]
Duress alarm	[User Code with Last Digit + 1] [0]

Programming

Enter programming mode	[Master Code] [7] [Address] [Value] [*]
Change Master Code	[Master Code] [7] [70] [4 Digits Code] [*]

**Address 70 is Master user, Address 72 to 79 is for user 3 to 9 respectively*

Program telephone number 1	[Master Code] [7] [91] [New Number] [*] [*]
Delete telephone number 3	[Master Code] [7] [93] [#] [#]

**Address 91 to 98 is for personal telephone number 1 to 8 respectively, Max. Tel. Number is 16 digits*

Program Entry time	[Master Code] [7] [53] [3 Digits Value] [*]
Program Exit time	[Master Code] [7] [54] [3 Digits Value] [*]

**Entry and exit time are in unit second. Eg. 50 seconds is "050"*

Program system time (hour)	[Master Code] [7] [56] [3 Digits Value] [*]
Program system time (minute)	[Master Code] [7] [57] [3 Digits Value] [*]
Program auto arm time (hour)	[Master Code] [7] [87] [3 Digits Value] [*]
Program auto arm time (minute)	[Master Code] [7] [88] [3 Digits Value] [*]
Program auto disarm time (hour)	[Master Code] [7] [89] [3 Digits Value] [*]
Program auto disarm time (minute)	[Master Code] [7] [90] [3 Digits Value] [*]

** System time, auto arm & disarm time are 24-hour format. Eg. 10:30pm is " 022 " and "030"*

Call-In and Call-Out Block Diagram

