

Anbaod 101 Door Access

Admin Code: **your 6-digit programming code**

CHANGE Admin Code

[*][Admin Code] (Green LED ON)
[0] [6-digit New Admin Code]
[repeat 6-digit New Admin Code]
[*] to exit program

ADD CARD

[*][Admin Code] (Green LED ON)
[5][3-digit User# eg. 001,002,003,.....,500]
[Flash one New Card]
[*][*] to exit program

Note: recommended to use the last 3-digit of the printed card number

DELETE one CARD

[*][Admin Code] (Green LED ON)
[7][3-digit User# eg. 001,002,003,.....,500]
Or flash card
[*] to exit program

DELETE all CARD

- Refer factory default

ADD GLOBAL PIN

[*][Admin Code] (Green LED ON) [3][4-digit new PIN]
[*] to exit program

DELETE GLOBAL PIN

[*][Admin Code] (Green LED ON) [3][0000]
[*] to exit program

CHANGE DOOR LOCKING TIME (seconds)

[*][Admin Code] (Green LED ON)
[2] [2-digit seconds, eg: 05 for 5 seconds]
[*] to exit program

CHANGE DOOR OPEN MODE

[*][Admin Code] (Green LED ON)
[10] card or pin mode
[11] card + pin mode
[*] to exit program

SETTING USER PIN MODE

[*][Admin Code] (Green LED ON) [12] user PIN off
[13] user PIN on
[*] to exit program

CHANGE USER PIN

[#]
Flash user card
Enter 4-digit old PIN (default: 0000)
Enter 4-digit new PIN
Repeat 4-digit new PIN

OTHERS advance setting

[40] tamper switch OFF
[41] tamper switch ON
[60] valid open on door closed OFF
[61] valid open on door closed ON
[80] door sensor OFF
[81] door sensor ON
[82][tt] delay before alarm on door open
[86] reset to factory default



J2-nnz121

