

Access Control belco

Admin Code: **your 6-digit programming code**

Change Admin Code

[#][Admin Code][#]
[0][6-digit Admin Code][#]
[repeat 6-digit Admin Code][#]

Add Card

[#][Admin Code][#]
[1][Flash New Card][#]

Add Card with Pin (Card+Pin Mode)

[#][Admin Code][#]
[3][Flash New Card][3~6-digit Pin][#]

Set Common Pin [#]

[Admin Code][#]
[21][3~6-digit Pin][#]

Delete by reading Card

[#][Admin Code][#]
[41][Flash Card][#]

Delete All cards and Pins

[#][Admin Code][#]
[40][0000][#]

Change Lock Release Time

[#][Admin Code][#]
[5] [2-digit seconds][#]

SET OPEN MODE

[#][Admin Code][#]
[6]
{ 01}card {02}card/pin {03}card+pin
[#]

Change PIN (Card+Pin Mode)

Read card then enter exiting pin
Hold down [#] until green light flashing then
[4-digit new pin][#]
[4-digit new pin][#]

SET as W26 Reader

[#][Admin Code][#]
[6][04][#]



Optional add on features:

- Door bell
- Contactless release button
- Door release thru phone APP
- remote control button