

COUNS CU-K03 Door Access

Admin Code: your 4-digit programming code

Normal operation mode: red led flashing

CHANGE ADMIN CODE

[*][Admin Code][#]
[0] [4-digit New Admin Code][#]
[repeat 4-digit New Admin Code][#][*]

Or

[*][Admin Code][#]
[0][flash card] to register/delete admin card
[*]

ADD CARD with UserID

[*][Admin Code][#]
[1][flash new card]
[3-digit UserID eg. 001~999][#][*]

Note: recommended to use the last 3-digit of the printed card number

ADD CARD without UserID

[*][Admin Code][#]
[1][flash new card][#][*]

EDIT PIN

[*][Admin Code][#]
[5][4~6-digit PIN][#]
[repeat the same 4~6-digit PIN][#][*]

DELETE one CARD

[*][Admin Code][#]
[2][3-digit UserID eg. 001~999][#][*]
Or
[2][flash card][#][*]

DELETE all CARD

[*][Admin Code][#]
[2][0000][#][*]

CHANGE DOOR OPEN TIME (seconds)

[*][Admin Code][#]
[4] [2-digit seconds, example: 05][#][*]

CHANGE DOOR OPEN MODE

[*][Admin Code][#]
[300][#][*] card
[301][#][*] card + pin mode
[302][#][*] card or pin mode



**Wiring Color Code
(with JP3 shorted):**
Red(12DCV +) -> EMLock(+)
Yellow -> EMLock(-)

With (PSU)
Green(Push)->(PUSH)
EMLock+ ->(NC)
EMLock- ->(COM)

Supported by: www.ealarm.com.my



Optional add on features:

- Door bell
- Contactless release button
- Door release thru phone APP
- remote control button