

COUNS CU-K08 Door Access

Admin Code: your 4-digit programming code

CHANGE ADMIN CODE

[*][Admin Code][#]
[0] [4-digit New Admin Code][#]
[repeat 4-digit New Admin Code] [#][*]

ADD CARD with UserID

[*][Admin Code][#]
[1][flash new card]
[3-digit UserID eg. 001~500][#][*] *Note:*
recommended to use the last 3-digit of the
printed card number

DELETE one CARD

[*][Admin Code][#]
[2][3-digit UserID eg. 001~500][#]
[*] Or
[2][flash card][#][*]

DELETE all CARD

[*][Admin Code][#]
[2][0000][#][*]

MODIFY USER PASSWORD

[*][flash card] *green led flashing*
[old 4-digit password][#]
[new 4-digit password][#]
[new 4-digit password][#][*]
**Default password for all card is 1234.*

CHANGE DOOR OPEN TIME (seconds)

[*][Admin Code][#]
[4] [digit seconds, example: 05][#][*]

CHANGE DOOR OPEN MODE

[*][Admin Code][#]
[300][#][*] card
[301][#][*] card + pin mode
[302][#][*] card or pin mode

CHANGE ALARM DURATION (seconds)

[*][Admin Code][#]
[5] [2-digit minutes, example: 05][#][*]

DOOR STATUS

[*][Admin Code][#]
[6] [00 disable or 01 enable][#][*]



Supported by:
www.ealarm.com.my



Optional add on features: 49

- Door bell
- Contactless release button
- Door release thru phone APP
- remote control button