

C102B Door Access System

Default Installer Code: **12345**

ADD CARD

[#][**12345**] (Power, OK and Mode LED Flash)
[2][4-digit User# eg. 0001,0002,0003,0004,...]
[Flash New Card]
[6] to exit program

ADD PIN

[#][**12345**] (Power, OK and Mode LED Flash)
[2][0000] [6-digit New Pin]
[6] to exit program

DELETE PIN

[#][**12345**] (Power, OK and Mode LED Flash)
[3][0000]
[6] to exit program

DELETE one CARD

[#][**12345**] (Power, OK and Mode LED Flash)
[3][4-digit User# eg: 0001,0002,0003,0004,...]
[6] to exit program

DELETE ALL CARDS and PINS

[#][**12345**] (Power, OK and Mode LED Flash)
[4] wait for beep
[6] to exit program

EDIT PIN NUMBER

[#][**12345**] (Power, OK and Mode LED Flash)
[3][0000]
[2][0000] [6-digit New Pin]
[6] to exit program

CHANGE DOOR LOCKING TIME (seconds)

[#][**12345**] (Power, OK and Mode LED Flash)
[5] [2-digit seconds, eg: 05 for 5 seconds]
[6] to exit program

CHANGE INSTALLER CODE

[#][**12345**] (Power, OK and Mode LED Flash)
[1] [5-digit New Installer Code]
[6] to exit program

TO OPEN DOOR

Flash Valid Card OR enter 6-digit-PIN

