

# **S500 Standalone Default Master Code 111111**

## **1. Cold Start (Reset)**

- Off Power
- Press \* and # (hold together)
- On power
- Beeper sounded
- Release both keys

## **2. Install Card (first time)**

- Key in Master Code (6 digits), follow by #
- Press 41#
- Flash card (continuous scan)
- Press #

## **3. Install Card (following time)**

- Key in Master Code (6 digits), follow by #
- Scan any valid user card
- Press 41#
- Flash new card
- Press #



## **4. Delete Card (Number)**

- Key in Master Code (6 digits), follow by #
- Flash any valid user card
- Press 60#
- Key in card number (first 8 digits or less from the first group, ignoring leading 0)
- Press #

## **5. Delete Card (Flash Card)**

- Key in Master Code (6 digits), follow by #
- Flash any valid user card
- Press 61#
- Flash card to be deleted
- Press #

## **5. Card Only Mode**

- Key in Master Code (6 digits), follow by #
- Flash any valid user card
- Key in 801#

## **6. Card or PIN Mode**

- Key in Master Code (6 digits), follow by #
- Flash any valid user card
- Key in 803#

## **8. Change PIN**

- Key in Master Code (6 digits), follow by #
- Flash any valid user card
- Press 2
- Enter new 4-digit PIN
- Press #

## **9. Lock Release Time**

- Key in Master Code (6 digits), follow by #
- Flash any valid user card
- Press 91
- Enter 2-digits (01-99 sec)
- Press #

## **10. Change Master Code**

- Key in Master Code (6 digits), follow by #
- Flash any valid user card
- Press 3
- Enter 6-digit Master Code
- Press #