

F20W waterproof Door Access

Admin Code: your 6-digit programming code

Normal Operation Mode: Red lights on

[#] = hold until blue light flashing

CHANGE ADMIN CODE

Hold [#][Admin Code] *blue lights on*

[9][6-digit New Admin Code]

[repeat 6-digit New Admin Code]

ADD Card with UserID

Hold [#][Admin Code] *blue lights on*

[1][3-digit UserID eg. 001~500]

[flash new card][#]

Note: recommended to use the last 3-digit of the printed card number

ADD Fingerprint with UserID

Hold [#][Admin Code] *blue lights on*

[1][3-digit UserID eg. 001~500]

[show same finger 3 times][#]

EDIT PIN

Hold [#][Admin Code] *blue lights on*

[2][4-digit PIN]

[repeat the same 4-digit PIN]

DELETE one Card/Fingerprint

Hold [#][Admin Code] *blue lights on*

[3][3-digit UserID eg. 001~500][#]

DELETE all Cards/Fingerprint

Hold [#][Admin Code] *blue lights on*

[4][Admin Code]

CHANGE DOOR OPEN TIME (seconds)

Hold [#][Admin Code] *blue lights on*

[5][2-digit seconds, example: 05]

Factory Default

Hold [#][Admin Code] *blue lights on*

[6]Hold [#][Admin Code]

“ADD CARD” use to add card only

Hold [#][Admin Code] *blue lights on*

[7][flash new Admin card]

--- flash ‘ADD CARD’, then 3-digit UserID, then flash a new card to add new access card

“DELETE CARD” use to delete card only

Hold [#][Admin Code] *blue lights on*

[8][flash Admin card]

--- flash ‘DELETE CARD’, then 3-digit UserID, then flash the old card to remove access.



Supported by: www.ealarm.com.my



16

Optional add on features:

- Door bell
- Contactless release button
- Door release thru phone APP
- remote control button #555