

HIK K1T801 Door Access Admin

Code: your 5-digit programming code

CHANGE ADMIN CODE

[Admin Code][*][0][#]
[00][5-digit New Admin Code]
[5-digit New Admin Code][#][*][#]

ADD CARD with UserID

[Admin Code][*][0][#]
[01][4-digit UserID eg. 0001~3000]
[flash new card][#][*][#]
Note: recommended to use the last 3-digit of the printed card number

ADD CARD+Pin with UserID

[Admin Code][*][0][#]
[01][4-digit UserID eg. 0001~3000]
[flash new card]
[4~8 digit CardPin][#][*][#]
Note: recommended to use the last 3-digit of the printed card number

DELETE one CARD

[Admin Code][*][0][#]
[02][4-digit UserID eg. 0001~3000][#][*][#]
Or
[02][flash card][#][*][#]
Or
[02][4~8 digit CardPin][#][*][#]

DELETE all CARDS

[Admin Code][*][0][#]
[07][Admin Code][#][*][#]

ADD/EDIT Pin

[Admin Code][*][0][#]
[10][4-digit UserID eg. 0001~3000]
[4~8 digit Pin][#][*][#]

CHANGE DOOR OPEN MODE

[Admin Code][*][0][#]
[03][0][#][*][#] allow card access only
[03][1][#][*][#] allow card/pin access

OTHER PARAMETERS

[Admin Code][*][0][#]
[04]
[3-digit door open time 001~255]
[2-digit door open timeout 00~99]
[1-digit Lock NC(0), NO(1)]
[1-digit Button NC(0), NO(1)]
[#][*][#]

SUPER PASSWORD

[Admin Code][*][0][#]
[05][8-digit password][8-digit password][#][*][#]
Note: 00000000 disabled



K1T-801



K1T-802 *0#

b

Supported by: www.ealarm.com.my



15

Optional add on features:

- Door bell
- Contactless release button
- Door release thru phone APP
- remote control button