

IDGARD BC5100s Door Access

Admin Code: your 6-digit programming code

CHANGE Admin CODE

[*][Admin Code][#]
[0] [6-digit New Programming Code][#]
[repeat 6-digit New Programming Code] [#]

ADD CARD

[*][Admin Code][#]
[1][UserID 1→2000][#]
[Flash one New Card][#]

Note: recommended to use the last 3-digit of the printed card number

DELETE one CARD/PIN

[*][Admin Code][#]
[2][UserID 1→2000] Or flash card[#]

DELETE all CARD

[*][Admin Code][#]
[2][0000][#]

ADD PIN 1234 invalid

[*][Admin Code][#]
[1][UserID 1→2000][#]
[4-digit PIN][#][#]

CHANGE DOOR UNLOCK TIME (seconds)

[*][Admin Code][#]
[4] [0→99 seconds][#]

CHANGE DOOR OPEN MODE

[*][Admin Code][#]
[30][#] card
[31][#] card + pin mode
[32][#] card or pin mode

DOOR SENSOR

[*][Admin Code][#]
[60][#] disable
[61][#] enable

ALARM OUTPUT TIME

[*][Admin Code][#]
[5][0→3][#]

KEYPAD LOCKOUT

[*][Admin Code][#]
[70] normal status
[71][#] keypad lockout
[72][#] alarm and buzzer

RESET FORCE OPEN/ALARM

Flash card or Master Pin

Change Individual Pin by Card (default PIN 1234)

[*][Read Card][OLD-PIN][#][4-digit-PIN][#][4-digit-PIN][#]

