

IDGard BC8100 Door Access

Admin Code: **your 4-digit programming code**

CHANGE ADMIN CODE

[*][Admin Code][#]
[0] [4~8 digits New Admin Code][#][*]

ADD CARD with User#

[*][Admin Code][#]
[1][4-digit User# 0001~9999][#]
[Flash one New Card][#][*]

Note: recommended to use the last 4-digit of the printed card number

ADD PIN with User#

[*][Admin Code][#]
[1][4-digit User# 0001~9999][#]
[4-digit PIN][#][#][*]

DELETE one CARD/PIN

[*][Admin Code][#]
[21][4-digit User# 0001~9999][#][#][*]
Or
[2][PIN][#][#][*]

DELETE all CARD

[*][Admin Code][#]
[2][0000][#][*]

ADD GLOBAL PIN

[*][Admin Code][#]
[9][4-digit PIN][#][*]

DELETE GLOBAL PIN

[*][Admin Code][#][9][#][*]

CHANGE DOOR OPEN TIME (seconds)

[*][Admin Code][#]
[40] [2-digit seconds, eg: 05 for 5 seconds][#][*]

CHANGE DOOR OPEN MODE

[*][Admin Code][#]
[300][#][*] card or pin mode
[301][#][*] card + pin mode

OTHERS

[41] latches relay
[70][0] PIN follow by # to open
[70][1] PIN to open; PIN to be same length as admin code
[71] door release beep [0]disable [1]enable
[72] pacifier tone [0]disable [1]enable
[73] door forced open alarm [0]disable [1]enable
[74][01~99 minutes] alarm timeout
[80][0] keypad lockout disabled
[80][1] trigger alarm after 10 invalid entries
[81][03~10 invalid entries][*][01~99minutes freezed]
[90][0~99seconds] door left open alarm. 0 disable

jp



14



supported by:
ealarm.com.my

Optional add on features:

- Door bell
- Contactless release button
- Door release thru phone APP
- remote control button