

## Intego/DAC35 Door Access

*Admin Code: your 4-digit programming code*

### CHANGE ADMIN CODE

[ENTER] **p** [Admin Code] **o**  
[41] **n** [4-digit New Admin Code] **c**  
[repeat 4-digit New Admin Code]

### ADD CARD by flashing card

[ENTER] **p** [Admin Code] **o**  
[11] **c** [flash new card]  
**A** card added **E** card already exist  
[ESC]

### ADD CARD by card number

[ENTER] **p** [Admin Code] **o**  
[13] **n** [0001] **c** [5-digit-card-number]  
[ESC]

### ADD PIN press # follow by PIN to open

[ENTER] **p** [Admin Code] **o**  
[21] **n** [01~50] **p** [4-digit PIN, enter  
0000 disable]  
[ESC]

### DELETE CARD by flashing card

[ENTER] **p** [Admin Code] **o**  
[12] **c** [flash card]  
**d** card deleted **E** card not exist  
[ESC]

### DELETE CARD by card number

[ENTER] **p** [Admin Code] **o**  
[14] **n** [0001] **c** [5-digit-card-number]  
[ESC]

### DELETE all CARD

[ENTER] **p** [Admin Code] **o**  
[15] then toggle from 0 to 1  
[ENTER][ESC]

### CHANGE DOOR OPEN TIME (seconds)

[ENTER] **p** [Admin Code] **o**  
[31][2-digit seconds, example: 05][ESC]

### OTHERS

[32] door left open time  
[33] door sensor: 0 disable, 1 enable  
[34] card+pin: 0 disable, 1 enable  
[35] keypad lock: 0 disable, 1 enable  
[36] Lock Polarity 0 NC, 1 NO

### To Change User CardPin

*Default old pin is 8888*

[1][flash card][old pin][new pin][new  
pin]



Supported by:

[www.ealarm.com.my](http://www.ealarm.com.my)



powered by  
ealarm.com.my

*Optional add on features:*

- Door bell
- Contactless release button
- Door release thru phone APP
- remote control button