

EP100 j

Default Password to enter into programming mode is '**123456 + ENT**'

Default operation mode is **CARD ONLY**

Inside Programming Mode

Change Password Pin

Press 1 follow by '**PPPPPP CCCCCC + ENT**'

*P = New Password

*C = Confirm Password

Install Card and Pin

Press 2 follows by 4 digits Pin '**PPPP**' **ENT + flash card**

*P = Pin number (if card exist pin will be overwrite with

*P)

Install Range of Card

Press 2, key in range of card number(5 digits). Example: **00001 00010 + ENT**

Pin number will the last 4 digits of the card number.

Install Card by Flashing Card(normally for card number not in sequence)

Press '**3 + 1 + ENT**' and flash card continuously

Press '**ESC**' twice to exit from card adding mode

Delete a user card from card database

Press **4 + ccccc + ENT**

Where ccccc = card number to delete (pin that attached to this card will be deleted as well)

Clear Database: Press **5 + 1 + ENT**

Lock Release Time

Press **6** follow by time [SS] then press **ENT** . Time second can up to 9999 seconds

*SS = Second

Activate Operation Mode:

Press **7 + m + ENT**

Where m = 0 (Card Only) , m = 1 (Card or Pin), m = 2 (Card and Pin)

Exit Programming mode: Press **ESC** once

Tamper Switch

Press 8 then follow by **0 + ENT** means that Disable. Press 8 then follow by **1 + ENT** to enable

Master Pin Code Entry

To add master pin = Press **9 + s + pppp + ENT**

To delete pin = Press **9 + s + 1 + ENT**

Where s = Pin code entry set to be set (1 to 5)

pppp = Pin assigned to particular set of pin code entry.

Installer code function (this function only work in Idle mode, not in programming mode)

Press **8 + 1 + 1234 + m + 9 + ENT**

Where

m = Function Mode

m = 4 (Disable the function of Door Sensor)

m = 5 (Enable the function of Door Sensor)