

Kmax MSA PT.E50 CPT800 Door

Access

Admin Code: your 6-digit programming code

CHANGE ADMIN CODE

[#####][Admin Code][#]
[0][6-digit New Admin Code][#]
[repeat 6-digit New Admin Code] [#][*]

ADD CARD with User#

[#####][Admin Code][#]
[2][flash new card]
[4-digit User# eg. 0001~9999][#][*]
Note: recommended to use the last 4-digit of the printed card number

ADD CARD without User#

[#####][Admin Code][#]
[1][flash new card][#][*]

EDIT PIN

[#####][Admin Code][#]
[6][6-digit PIN][#]
[repeat 6-digit PIN][#][*]

DELETE PIN

[#####][Admin Code][#]
[6][#][#][*]

DELETE one CARD

[#####][Admin Code][#]
[31][4-digit User# 0001~9999][#][*]
Or
[30][flash card][#][*]

DELETE all CARD

[#####][Admin Code][#]
[3][2][9999][#][*]

CHANGE DOOR OPEN TIME (seconds)

[#####][Admin Code][#]
[5][2-digit seconds, example: 05][#][*]
NOTE: 99 to toggle open or close

CHANGE DOOR OPEN MODE

[#####][Admin Code][#]
[40][#][*] card or pin mode
[41][#][*] card + pin mode
[42][#][*] pin only

To Change User Card Pin

Default old pin is 888888
[*][flash card][old pin][#]
[new pin][#][repeat new pin][#]



Supported by:
www.ealarm.com.my



16

Optional add on features:

- Door bell
- Contactless release button
- Door release thru phone APP
- remote control button