

PinGuard, XP-SK32

Keypad Standalone Reader

Instructions Manual


Programming Mode

To access the programming mode, user has to press *(asterisk) followed by the Master Pin number (Default = **123456**).

SuperPin

This is a shortcut to enable or disable AutoPin Mode. In idle mode, press *(asterisk) and the the 6 digits SuperPin to enable or disable the AutoPin Mode (Default = **987654**).

Wiring Diagram

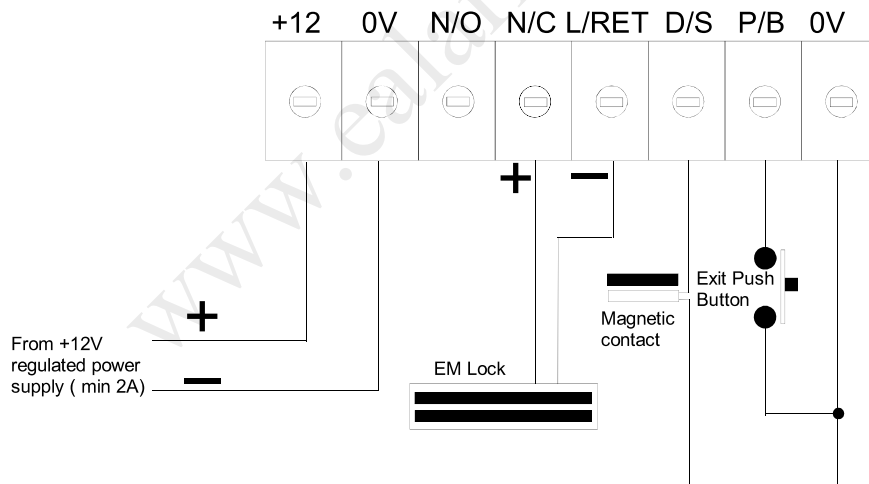

Programming Mode	
01...32: Pin Number - Location of the 32 sets of AutoPIN numbers.	- Enter one of the 2-digit number between 02 and 32. - Key in the 4 digits AutoPIN number. - Press # to confirm.
51: MasterPIN - Change the MasterPIN to enter programming mode. - Default = 123456	- Press 51. - Key in a 6 digits new MasterPIN number. - Press # to confirm.
52: SuperPIN - Change the SuperPIN to enable or disable AutoPIN Mode in idle state. - Default = 987654	- Press 52. - Key in a 6 digits new SuperPIN number. - Press # to confirm.
61: AutoPIN Mode - To enable or disable AutoPIN Mode.	- Press 61. - Press 1 to enable or 0 to disable AutoPIN Mode. - Press # to confirm.
62: Security Mode - To turn ON or turn OFF the security of the system.	- Press 62. - Press 1 for ON or 0 for OFF. - Press # to confirm.
71: Door Open Time - To set door open duration in second.	- Press 71. - Enter the required duration (0 – 99 sec.). - Press # to confirm.
72: Lock Release Time - To set lock release duration in second.	- Press 72. - Enter the required duration (0 – 99 sec.). - Press # to confirm.