

# MZ10 Door Access

Flash Master Card to enter programming

## ADD CARDS

[1][flash card(s)][\*]

## SET PIN

[6][4-digit-PIN][\*]

## DELETE CARDS

[2][flash card(s)][\*]

## DELETE CARD by card number

[5][6-digit-card-number][\*]

## CHANGE DOOR OPEN TIME (seconds)

[3] [1~4][\*]

Note: 1=3 secs, 2=5 secs, 3=10 secs, 4=20 secs

## SECURE/UNSECURE LOCK

[7][\*]

## COLD START

[1]+[3]

Flash card as Master Card

\*



supported by:  
**ealarm**.com.my