

BlueLED Door Access

Admin Code: your 5-digit programming code

ADD CARD

[ENT][Admin Code] [ENT](Power+Orange LED on)
[2][Flash New Card or 5-digit Card Number]
[ENT] to exit program

ADD PIN

[ENT][Admin Code] [ENT](Power+Orange LED on)
[2][6-digit pin] [ENT]
[ENT] to exit program

ADD CARD+PIN

[ENT][Admin Code] [ENT](Power+Orange LED on)
[4][Flash New Card or 5-digit Card Number]
[ENT] to exit program

Password can only be set during 1st time using the new card: flash card, then enter 6-digit password

DELETE PIN

[ENT][Admin Code] [ENT](Power+Orange LED on)
[3][6-digit pin to be deleted] [ENT]
[ENT] to exit program

DELETE CARD

[ENT][Admin Code] [ENT](Power+Orange LED on)
[3][5-digit Card Number][ENT]
Or [3][Flash Card]
[ENT] to exit program

CHANGE DOOR LOCKING TIME (seconds)

[ENT][Admin Code] [ENT](Power+Orange LED on)
[0] [1-255 seconds] [ENT]
[ENT] to exit program

CHANGE ADMIN CODE

[ENT][Admin Code] [ENT] (Power+Orange LED on)
[1] [5-digit New Admin Code] [ENT]
[ENT] to exit program

RESET to DEFAULT

[ENT][Admin Code] [ENT] (Power+Orange LED on)
[50]
[ENT] to exit program

TO OPEN DOOR

Flash Valid Card OR enter 6-digit-PIN [ENT]



15 pb-power



Wiring Color Code:
Red(12DCV+), Black(common)
Yellow(alarm)
Gray(Door Sensor)
Blue(Open)
Green(D1)
White(D0)
Brown(NC) -> lock(-)
Purple(NO)
Pinks(Bell) -> ESC to ring