

SEBURY K2/BC2000 Door Access

Admin Code: your 4-digit programming code

CHANGE ADMIN CODE

[*][Admin Code][#]
[0] [4~6 digits New Admin Code][#]
[repeat 4~6 digits New Admin Code]
[#][*]

ADD CARD with User#

[*][Admin Code][#]
[1][3-digit User# eg. 001~999][#]
[flash new card][#][*]
Note: recommended to use the last 3-digit of the printed card number

ADD CARD without User#

[*][Admin Code][#]
[1][flash new card][#][*]

ADD PIN

[*][Admin Code][#]
[1][3-digits User#: 000~999][#]
[4~6-digits PIN][#][*]

CHANGE PIN

[*][3-digits User#: 000~999][#]
[old PIN][#]
[new 4~6-digits PIN][#]
[new 4~6-digits PIN][#][*]

DELETE CARD or PIN

[*][Admin Code][#]
[2][3-digit User#: 000~999][#][*]
Or
[2][flash card][#][*]

DELETE all CARD

[*][Admin Code][#]
[2][0000][#][*]

CHANGE DOOR OPEN TIME (seconds)

[*][Admin Code][#]
[4] [2-digit seconds][#][*]

CHANGE DOOR OPEN MODE

[*][Admin Code][#]
[30][#][*] card
[31][#][*] card + pin mode
[32][#][*] card or pin mode

OTHERS

[40] relay toggle
[60] door status off
[61] door status ON
[5][1~3 mins] alarm timeout
[70] keypad lockout/alarm output OFF
[71] keypad lockout OFF
[72] alarm output ON

Change PIN by card (card+pin mode)

[*][flash card][old PIN, default: 1234][#]
[new 4~6-digits PIN][#]
[new 4~6-digits PIN][#][*]



49

hd *

Supported by: www.ealarm.com.my

Optional add on features:

- Contactless release button
- Door release thru phone APP
- remote control button