

SOYAL 721H Door Access

Admin Code: your 6-digit programming code

Change Admin Code

[*][Admin Code][#] *tit tit tit*
[09][*]
[6-digit New Admin Code]
[repeat 6-digit New Admin Code][#]
[*][#]

Add Card with UserID

[*][Admin Code][#]
[19][*][5-digit UserID 00000~01023][*]
[00001][#][flash new card]
[*][#]

Note: for UserID, it is recommended to use 00 follow by the last 3-digit of the printed card-number

Delete card with UserID

[*][Admin Code][#]
[10][*][5-digit UserID 00000~01023][9]
[repeat the same 5-digit UserID][#]
[*][#]

Add PIN with UserID

[*][Admin Code][#]
[12][*][5-digit UserID 00000~01023][*]
[4-digit PIN][#]
[*][#]

Delete all Cards

[*][Admin Code][#]
[29][*][29][*][#]
[*][#]

Change Door Open Time

[*][Admin Code][#]
[02][*]
[3-digit seconds, example: 005][#]
[*][#]

Set Card PIN (Card+PIN mode)

[*][Admin Code][#]
[13][*][5-digit UserID 00000~01023][*]
[4-digit PIN][#]
[*][#]

Set Control Mode to M8

[*][Admin Code][#]
[04][*][8][#]

Set NodeID

[*][Admin Code][#]
[00][*][3-digit NodeID 001~254][#]
[*][#]

Door Left Open Time

[*][Admin Code][#]
[18][*][3-digit seconds 001~600][#]
[*][#]

Set System Clock

[*][Admin Code][#]
[25][*][YYMMDDHHmmSS][#]
[*][#]



Supported by: www.ealarm.com.my

