

IDCard/XPROX Door Access

Admin Code: **your 6-digit programming code**

CHANGE INSTALLER CODE

[#][**Admin Code**] (Green LED ON)
[0] [6-digit New Installer Code]
[repeat 6-digit New Installer Code]
[#] to exit program

ADD CARD

[#][**Admin Code**] (Green LED ON)
[5][3-digit User# eg. 001,002,003,004,...]
[Flash one New Card]
[#][#] to exit program

Note: recommended to use the last 3-digit of the printed card number

DELETE one CARD

[#][**Admin Code**] (Green LED ON)
[7][3-digit User# eg. 001,002,003,004,...]
Or flash card
[#] to exit program

DELETE all CARD

- *Refer factory default*

ADD GLOBAL PIN

[#][**Admin Code**] (Green LED ON)
[3][4-digit new PIN]
[#] to exit program

DELETE GLOBAL PIN

[#][**Admin Code**] (Green LED ON)
[3][0000]
[#] to exit program

CHANGE DOOR LOCKING TIME (seconds)

[#][**Admin Code**] (Green LED ON)
[2] [2-digit seconds, eg: 05 for 5 seconds]
[#] to exit program

CHANGE DOOR OPEN MODE [#]

[**Admin Code**] (Green LED ON)
[10] card or pin mode
[11] card + pin mode
[#] to exit program

SETTING USER PIN MODE [#]

[**Admin Code**] (Green LED ON)
[12] user PIN off
[13] user PIN on
[#] to exit program

CHANGE USER PIN

Hold down [#] for 2 seconds
Flash user card
Enter 4-digit old PIN (default: 0000)
Enter 4-digit new PIN
Repeat 4-digit new PIN

OTHERS advance setting

[40] tamper switch OFF
[41] tamper switch ON
[60] valid open on door closed OFF
[61] valid open on door closed ON
[80] door sensor OFF
[81] door sensor ON
[82][tt] delay before alarm on door open
[86] reset to factory default



ee11tt