

YH2000-C Door Access

Admin Code: **your 6-digit programming code**



ADD CARD

[*][Admin Code] (OK Lights ON)
[5][3-digit UserNumber eg. Refer to last 3-digit of the printed card number]
[Flash the New Card] beep beep
[*][*] to exit program

EDIT Common Access PIN

[*][Admin Code] (OK Lights ON)
[3][4-digit New Access Pin] [*][*]
to exit program

EDIT Personal Access PIN

Note: must Enable Personal Access Pin
[#][Flash Personal Card]
[4-digit existing Personal Access Pin, default is 0000]
[4-digit new Personal Access Pin]
Re-enter [4-digit new Personal Access Pin]

DELETE one CARD

[*][Admin Code] (OK Lights ON)
[7][3-digit UserNumber eg. Refer to last 3-digit of the printed card number]
OR
[7][Flash the Card to be deleted]

[*][*] to exit program

DELETE ALL CARDS

[*][Admin Code] (OK Lights ON)
[86] load factory default setting
Wait for a few seconds
[*][*] to exit program

CHANGE DOOR LOCKING TIME (seconds)

[*][Admin Code] (OK Lights ON)
[2] [2-digit seconds, eg: 05 for 5 seconds]
[*][*] to exit program

CHANGE ADMIN CODE

[*][Admin Code] (OK Lights ON)
[0] [6-digit New Admin Code]
Re-enter [6-digit New Admin Code]
[*][*] to exit program

OTHERS

[10] Card or Pin Mode
[11] Card + Pin Mode
[12] Disable Personal Access Pin
[13] Enable Personal Access Pin
[40] Disable Tamper
[41] Enable Tamper
[60] Disable AntiPass
[61] Enable AntiPass (on two door application)
[80] Disable Door Open Status
[81] Enable Door Open Status
[82][tt] Delay before Alarm, tt = 2-digits seconds
[86] load factory default setting

BELL	BELL	+12V	GND	NC(-)	Push	OPEN	GND	Door
------	------	------	-----	-------	------	------	-----	------



nnz1z1