

XPROX PROGRAMMING

Enter Programming mode : * Admin Code #

Exit Programming mode : *

Change Admin Code : * Admin Code # 0 New Code # New Code # (6 - 8 Digit)

Working Mode :

- *# Admin Code # 30 # (Card Only)
- *# Admin Code # 31 # (Card & Pin)
- *#Admin Code # 32 # (Card or Pin)



CARD ONLY MODE

Add Card : * Admin Code # 1 Read Card # (Can Add Continuously)

Add Card by User ID : * Admin Code # 1 Input User ID # Read Card # (User ID 1 - 2000)

Delete Card : * Admin Code # 2 Read Card #

Delete by User ID : * Admin Code # 2 Input User ID #

CARD & PIN MODE

Add User : * Admin Code # 1 Read Card #

* Read Previous Card Input 1234 # New Pin # New Pin # (4 Digit **other than** 1234)

Change Pin : * Read Card Old Pin # New Pin # New Pin #

Delete User : * Admin Code # 2 Read card #

CARD OR PIN MODE

Add Card : * Admin Code # 1 Read Card #

Add Pin : * Admin Code # 1 User ID # Pin # (User ID 1 - 2000) (4 Digit Pin)

Change Pin : * User ID # Old Pin # New Pin # New Pin # (No Need To Enter Programming)

Delete Card : * Admin Code # 2 Read Card #

Delete Pin : * Admin Code # 2 User ID #

Delete Card by Card Number : * Admin Code # 2 Card Number # (Last 8 Digit)

Delete All Users : * Admin Code # 2 0000 #

Lock Time : * Admin Code # 4 0~99 # (0 - 99 seconds)

Door Open Too Long - to enable : * Admin Code # 61 #

(1 Minute fixed)

to disable : * Admin Code # 60 # (default)

Keypad Lockout & Alarm Output -

(Keypad lockout : 10 minutes fixed)

(Only 1 function can be enabled)

to disable (both) : * Admin Code # 70 # (default)

to enable keypad lockout : * Admin Code # 71 #

to enable alarm & buzzer : * Admin Code # 72 #

Alarm Output Time : *Admin Code # 5 0~3 # (0 - 3 minutes)

(Must program to activate build in buzzer)

Remove Alarm : Read Valid Card or Admin Code #