ZK X7 Fingerprint Access

Admin Code: your 4-digit programming code

Normal Operation Mode: Green Light Flashing

To Enter Programming:

While Green LED Flashing, otherwise press [*]
[*] [#] [Admin Password](Green LED steady)

CHANGE Admin Password

[8] [4-digit-new-password] [repeat 4-digit-new-password]

IMPORTANT NOTE (while registering users): It is advisable to manually record UserID after each successful finger/card registration. UserID is automatically assigned, starting from 1 for the first successfully registered finger/card, auto increment by 1 for the next finger/card. The deleted finger/card's UserID number will be assigned to the next newly registered finger/card.

ADD Fingerprint

[1]

Read fingerprint x 3 times
[*] to exit

ADD Card

[1] Read Card [*]

EDIT/DISABLE User Password

[3] [1~8]; can have up to 8 sets of password [4-digit-password] [repeat 4-digit-password] [*] *To disable password, set it as 0000. *enter User Password follow by [#] to open door.

DELETE User Fingerprint/Card

[2] [*UserID*] [#] OR

[2] Read Fingerprint or Card

DELETE ALL Fingerprint / Card

[9] [9]

CHANGE UNLOCKING TIME (seconds)

[4] [1-10seconds, no leading 0] [#]

OPEN MODE

[5] [Open Options]
Open Options:

- 1 Password Only
- 2 Card Only
- 3 Fingerprint Only
- 4 Password/Card/Fingerprint
- 5 Card with user password
- 6 Fingerprint with user password

SLEEP MODE

[0] [3] [0 enable or 1 disable]
Note: green light turns off

DOOR SENSOR MODE

[0] [5] [0 NO, 1 NC, 2 NONE]

DOOR SENSOR DELAY

[0] [4] [1-254seconds] [#] Note: Buzzer sounds 30 seconds

ALARM SWITCH

[0] [1] [0 enable or 1 disable]

Note: cancel alarm by valid access

FAIL AUTHENTICATION ALARM

[0] [2] [0 enable or 1 disable]
Note: 3 attempts, lock 20 seconds

TAMPER ALARM

[0] [7] [0 enable or 1 disable]





TPx3

Supported by: www.ealarm.com.my



14

Optional add on features:

- Door bell
- Contactless release button
- Door release thru phone APP
- remote control button